

Installation Procedure

Wattle Installation

Proper installation of the **Wattles** is essential in order to insure the success of the product. Wattles are designed for low surface flows, not to exceed 1 cfs for small areas. While they work well on streambanks, they should not be placed in the path of high waterflow. On slopes, Wattles should be installed on contour with a slight downward angle at the end of the row in order to prevent ponding at the mid-section. No overall slope preparation is needed prior to installation, however Wattles should always be installed in shallow trenches according to the guidelines given below. Running lengths of Wattles should be abutted firmly to ensure no leakage at the abutments. Guidelines regarding vertical spacing are given below. The Wattles should be pinned securely to the ground according to instructions in order to insure their stability and the success of the installation.

SPACING - DOWNSLOPE

Vertical spacing for slope installations should be determined by site conditions: slope gradient and soil type are the main factors. A good rule-of-thumb is:

- 1:1 slopes = 10 feet apart
- 2:1 slopes = 20 feet apart
- 3:1 slopes = 30 feet apart
- 4:1 slopes = 40 feet apart, etc.

However, adjustments may have to be made for the soil type: For soft, loamy soils - adjust the rows closer together; For hard, rocky soils - adjust the rows further apart.

TRENCHING

Use a hand tool such as a maddox or pick to score the ground. Using a shovel, dig the trench to the needed depth. Soil from excavating the trenches can be placed on the uphill, or flow side, of the trench to be used during installation.

- For soft, loamy soils dig a 3 - 5 inch trench.
- For hard, rocky soils dig a 2 - 3 inch trench.

INSTALLING

Lay the first Wattle snugly in the trench. **No daylight should be seen under the Wattle.** Pack soil from trenching against the Wattle on the uphill side. When installing running lengths of Wattles, butt the second Wattle tightly against the first. **DO NOT overlap the ends on top of each other.** Overlapping behind each other has been done with some success. Stake the Wattles at each end and four foot on center. For example:

- A 25 foot Wattle uses 6 stakes
- A 20 foot Wattle uses 5 stakes
- A 12 foot Wattle uses 4 stakes

Stakes should be driven through the middle of the Wattle, leaving 2 - 3 inches of the stake protruding above the Wattle. A heavy sediment load will tend to pick the Wattle up and could pull it off the stakes if they are driven down too low. It may be necessary to make a hole in the Wattle with the pick end of your maddox in order to get the stake through the straw or wood fiber. When Wattles are used for flat ground applications, drive the stakes straight down; when installing Wattles on slopes, drive the stakes perpendicular to the slope.

Drive the first end stake of the second Wattle at an angle toward the first Wattle in order to help abut them tightly together. If you have difficulty driving the stake into extremely hard or rocky slopes, a pilot bar may be needed to begin the stake hole.

FLAT GROUND APPLICATIONS


For installations along sidewalks or behind curbs it may not be necessary to stake the Wattles, however trenches must still be dug. If you have not yet back-filled behind the sidewalk or curb, lay the Wattle snugly against it first, then backfill behind the Wattle: your trench is done! For installations around storm drains and inlets, trenches and staking will be needed.

Fit Wattle in trench snugly up against the sidewalk or curb. Around storm drains or inlets, the Wattle should be back 1 - 1 1/2 ft. and should direct water flow toward the angle of drainage. If all drainage angles into the inlet, snake the Wattle all the way around the inlet, using more than one Wattle if needed.


STAKING

We recommend using wood stakes or willow cuttings, rather than metal pins, to secure the Wattles. Wood stakes will eventually bio-degrade, and willow cuttings will grow and provide extra stabilization. Be sure to use a stake that is long enough to protrude several inches above the Wattle: 18" is a good length for hard, rocky soil. For soft, loamy soil use a 24" stake for greater security. The diameter of the stake should be approximately 1" for ease of driving through the Wattle.



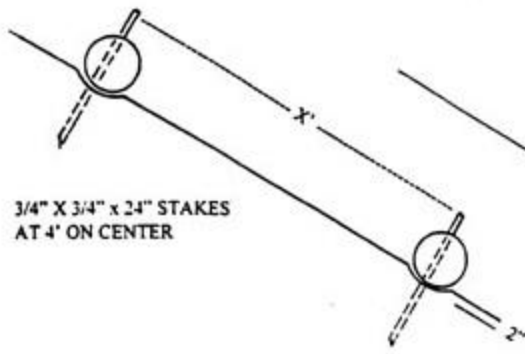

ON SLOPE

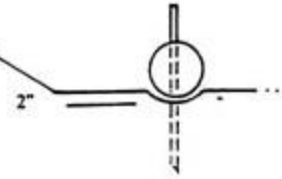

AT TOE OF SLOPE